
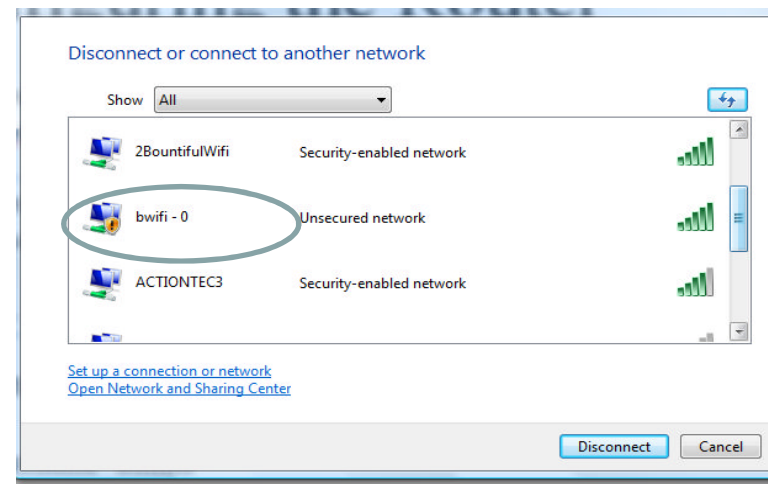


# Remote Admin

Will allow you to control a computer from a remote location

# Access Web Interface


View wireless network(s) and connect to bwifi - 0  
Or the SSID assigned to the  
\*Note The wireless network must be enabled on your computer

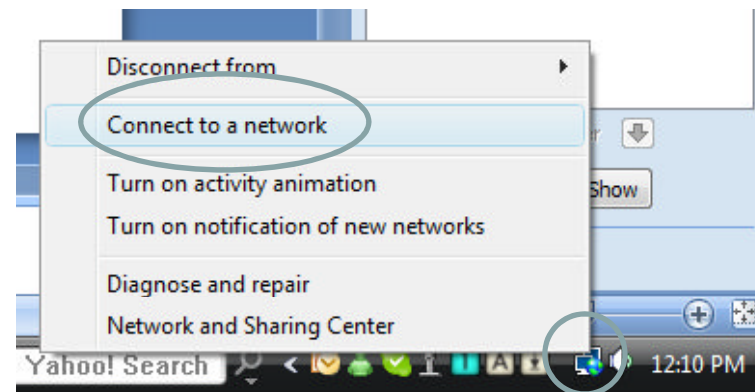

# Accessing Web Interface

---


Open an internet browser  
and type in the router IP  
address  
(default=192.168.0.1)  
Or IP address you assigned  
to your router

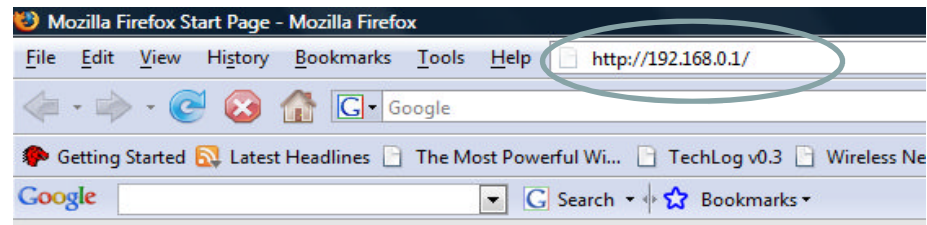

# Accessing Web Interface

---

Type in user name and password  
default username=admin  
password =admin  
Or the username and password  
assigned to the router

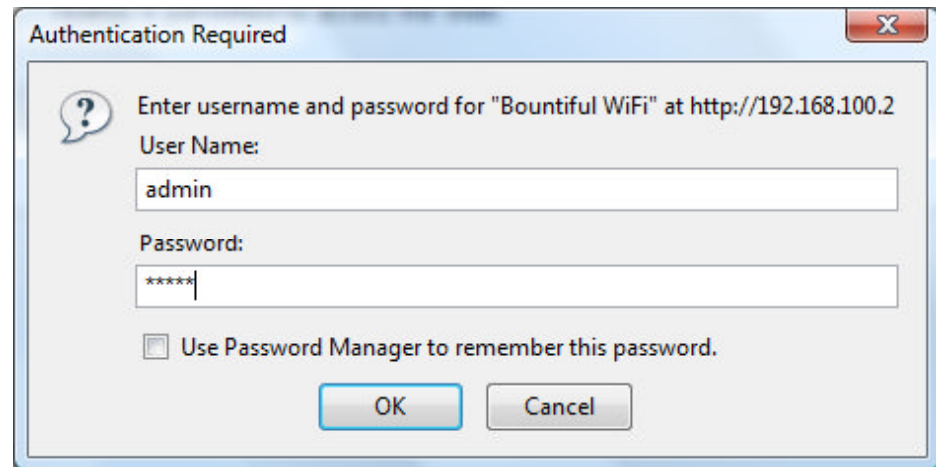A screenshot of a Windows-style dialog box titled "Authentication Required". The dialog box has a light blue header bar with a close button (X) in the top right corner. The main content area is white and contains a question mark icon in a speech bubble, followed by the text "Enter username and password for 'Bountiful WiFi' at http://192.168.100.2". Below this text are two input fields: "User Name:" with the text "admin" entered, and "Password:" with "\*\*\*\*\*" entered. At the bottom of the dialog box, there is a checkbox labeled "Use Password Manager to remember this password." which is currently unchecked. Below the checkbox are two buttons: "OK" and "Cancel".



# Accessing Web Interface

This is the status page of the Bountiful Web Interface


The screenshot shows the Bountiful web interface with the following sections:

- Status**
  - Firmware Version: 4.1.3.15.403 - Sep 20 2007, 14:04:35
  - System Uptime: Day 0, 0:02:01
  - Host name:
  - Domain name:
  - Ethernet MAC Address: 00:14:AC:00:0A:33
  - Wireless MAC Address: 00:14:AC:01:0A:33
- Internet Connection**
  - Connection Type: DHCP
  - IP Address: 0.0.0.0 / Mask 0.0.0.0
  - Gateway: 0.0.0.0
  - DNS Server 1: 0.0.0.0
  - DNS Server 2: 0.0.0.0
  - DNS Server 3: 0.0.0.0
- Local Connection**
  - Local IP Address: 192.168.0.1 / Mask 255.255.255.0
  - DHCP Server: Enabled
- Wireless**
  - Wireless Network: Disabled
  - | Active SSID | Security Type | Passphrase |
|-------------|---------------|------------|
| bwifi - 0   | Open-System   |            |

# Remote Web Admin



Click on the General Tab and scroll down to Miscellaneous

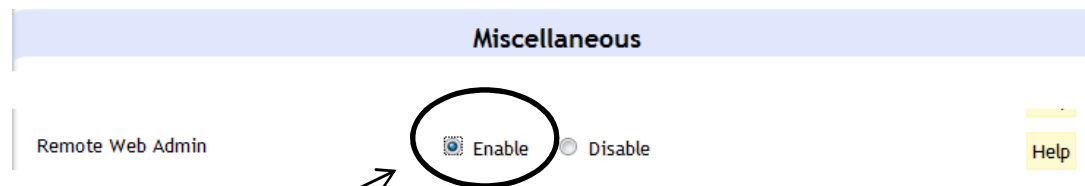


Click on Enable in order to enable Remote Web Admin




# Remote Admin

 ---

Scroll to the bottom of the page and click submit



Then when prompted reboot the router

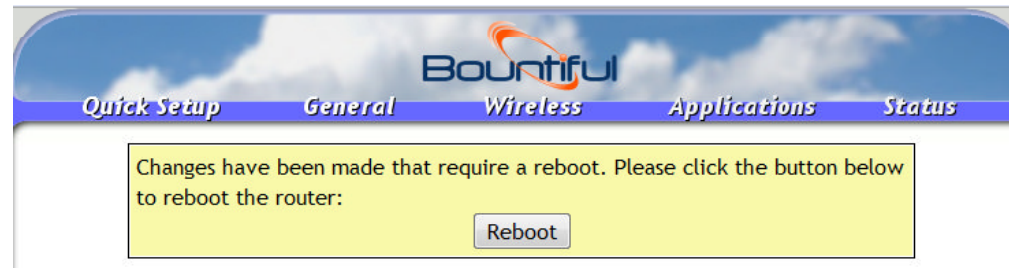

# Remote Admin

---

Remote Admin is now set up  
on the router